



## ***DS-500 DRI-SPLICE WIRE CONNECTOR***


### ***Installation Information***



WIRES



WIRE NUT

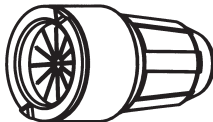

BODY

1. Strip wires and install wire nut.
2. Align wire nut wings with arrows and insert fully into body.

- Sealant: DS-500 Dielectric Silicon Sealant\* - defined as an Article, per OSHA 29 CFR 1910, 1200, which does not require an MSDS.
- Shelf Life: Indefinite at 73°F\*
- Electrical Systems: For use in electrical systems with 30v or less.  
UL Listing NOT required in most areas.
- Components: **Body** — Polypropylene  
**Wire Nut** — Twist-On Spring Type - UL/CSA Listed for 22 - 10 awg solid or stranded copper wire.

**Spears® Manufacturing Company Standard One (1) Year Product Limited Warranty Applies.**

\* Information developed and furnished by the Sealant Manufacturer.  
For additional information, please contact Spears® Technical Services Department  
(Sylmar, California or Lewisberry, Pennsylvania).